



Every **5 hours**

25 hours or every season

50 hours or every season

100 hours or every season



Check oil level.

Change oil.*

if equipped.



**After first 5 hours of use.











Replace foam air cleaner or optional foam pre-cleaner.

 
Replace paper

air cleaner.

Also, replace oil filter













Replace spark plug.





Replace in-line fuel filter, if equipped.





Remember to always treat your fuel with FuelFit® to keep your fuel fresh and ensure maximum engine life.

^{*} This 5 hour oil change only applies to specific engines. Refer to the operations manual of your engine for more info. ** Change oil after 5 hours, then after every 50 hours or every season.

[†] Service more often under dusty, heavy-load operating conditions.